



OUTDOOR INSTRUCTIONS

WARNING: READ AND UNDERSTAND ALL INSTRUCTIONS.

Failure to follow all instructions listed below, may result in electric shock, fire and/or serious personal injury.

WARNING:

ELECTRIC PRODUCT. Keep away from children. Not recommended for children under 3 years of age. As with all electrical products, precautions should be observed during handling and use to reduce the risk of electric shock. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

Adults Note: Periodically examine this product for damage to the cord, housing or other parts that may result in the risk of fire, electric shock or injury. If the product is damaged, do not use it. **DANGER** - To prevent electric shock, do not immerse in water; wipe clean with damp cloth. Immersing this product can result in an electric shock.

IMPORTANT SAFETY INSTRUCTIONS

WHEN USING ELECTRICAL PRODUCTS, BASIC PRECAUTIONS SHOULD ALWAYS BE FOLLOWED INCLUDING THE FOLLOWING:


READ AND FOLLOW ALL SAFETY INSTRUCTIONS

1. This is an electrical product - not a toy! To avoid risk of fire, burns, personal injury, and electric shock, it should not be played with or placed where small children can reach it.
2. Do not use products outdoors unless marked suitable for indoor and outdoor use. When products are used in outdoor applications, connect the product to a Ground Fault Circuit Interrupting (GFCI) outlet. If one is not provided, contact a qualified electrician for proper installation.
3. This product is not intended for permanent installation or use.
4. Do not mount or place near gas or electric heaters, fireplaces, candles, or other similar sources of heat.
5. Do not secure product wiring with staples or nails or place on sharp hooks or nails.
6. Do not let lamps rest on the supply cord or on any wire.
7. Unplug the product when leaving the house, when retiring for the night, or if left unattended.
8. Do not use this product for other than its intended purpose.
9. Do not hang ornaments or other objects from cord, wire, or light string.
10. Do not close doors or windows on the product, or extension cords, as this may damage the wire insulation.
11. Do not cover the product with a cloth, paper, or any material not part of the product when in use.
12. Do not place the product against carpeting, furniture, or any

3. Before using and reusing, inspect the product carefully. Discard any products that have cut, damaged or frayed wire insulation cords, cracks, lamp holders or enclosures, loose connections, or exposed copper wire.
4. When storing the product, carefully remove the product from wherever it is placed, including trees, branches, or bushes, to avoid any undue strain or stress on the product conductors, connections and wires.
5. When not in use, store neatly in a cool, dry location protected from sunlight.

Congratulations! You're the proud owner of a Gemmy Airblown® Inflatable. Please read over the directions carefully before using your Gemmy Airblown® Inflatable.

CONTENTS

Airblown® Inflatable	1 piece
UL-listed power supply:	1 piece
Input: 120V ~ 60Hz	
Output: 12.0V = 0.67A	
	
Tethers	2 pieces
Stakes	4 pieces

GENERAL INSTRUCTIONS

1. Remove contents from packaging.
2. Remove all plastic fasteners and tags. These are part of the packaging and should be discarded.
3. Connect adapter into connection of fan, plug adapter into standard wall outlet.
4. Fan will immediately begin to start the flow of air.
5. Zip zipper at base of fan. Airblown® will then fully inflate.
6. Using the loops attached at the bottom of the Airblown®, insert stakes into the ground.
7. Attach tethers to the Airblown®.
8. Insert the stakes into the ground so the tethers are taut.
9. Your Airblown® is weighted at the base with a sealed weight-bag. Adjust weight-bag to position your Airblown® as desired.
10. To deflate, unplug adapter. For faster deflation, unzip zipper after unplugging adapter. Do not unplug by pulling on cord.

This power unit is intended to be correctly orientated in a vertical or floor mount position.

WARNING

Remove all plastic fasteners and tags. These are part of the packaging and should be discarded.

For indoor and outdoor use.

This item is not a toy. For decorative purposes only.

TROUBLE SHOOTING CHECKLIST