

CAUTION: IMPORTANT SAFETY INSTRUCTIONS

READ AND FOLLOW ALL SAFETY INSTRUCTIONS

- Do not use seasonal products outdoors unless marked suitable for indoor and outdoor use. When products are used in outdoor applications, connect the product to a Ground Fault Circuit Interrupter (GFCI) outlet. If one is not provided, contact a qualified electrician for proper installation.
- This seasonal use product is not intended for permanent installation or use.
- Do not mount or place near gas or electric heaters, fireplaces, candles or other similar sources of heat.
- Do not secure the wiring of the product with staples or nails, or place on sharp hooks or nails.
- Unplug the product when leaving the house, when retiring for the night, or if left unattended.
- **CAUTION:** This is an electrical product - not a toy. To avoid risk of fire, burns, personal injury and electric shock, it should not be played with or placed where small children can reach it.
- Do not use this product for anything other than its intended use.
- Do not hang ornaments or other objects from cord, wire, or light string.
- Do not close doors or windows on the product or extension cords as this may damage the wire insulation.
- Never operate this product if the power cord or plug is damaged.
- Read and follow all instructions that are on the product or provided with the product.
- Protect the electric fan and power cord from exposure to water.
- Remove product completely from package before connecting to a power supply.
- **WARNING: this item is designed to be safely used in winter weather and will operate under normal exposure to rain or snow. However, the product should not be used under any condition that could lead it to be completely submerged under water.**

CAUTION: Product should not be inflated during unusually strong wind occurrences.

ASSEMBLY

1. Remove contents from packaging.
2. Place inflatable in a clean, open area, free from obstruction or other debris.
3. Roll out fabric and lay out the contents. Make sure the air intake located on the bottom of the unit is clear of fabric and free of obstruction.
4. Make sure the zipper is fully closed on the back of the unit.
5. Locate the tethers and attach the clips on one end of each tether to the ring grommets on the sides of the inflatable.
6. Connect the electrical cord to a power supply to inflate the product.
7. Clip the opposite end of each tether to a ground stake and insert the stakes into the ground where desired to secure product in place. Stakes can also be attached at the base of the product.
8. To deflate, simply unplug the cord from the power supply and open the zipper on the back side of product.

TROUBLESHOOTING

If motor is not working, the problem may be:

1. The power source is interrupted or cord may be unplugged.
2. Debris may be lodged in the motor.
3. Ensure that the zipper is securely closed so that air stays inside product.

MAINTENANCE AND STORAGE

Use only cold water and mild detergent to wipe the product clean. Leave inflated until completely dry.

Do not clean the motor with any liquids, wipe with a dry cloth only. Unplug, roll up and store in original box or one of similar size.

