

# Instruction Manual

## EN - Inflatable Figure

**Important:** Please read all instruction carefully before using this product.

**Caution:** Do not attempt to inflate during unusually strong wind. If it becomes too windy for safe operation, simply allow your inflatable to deflate, secure it , and wait for better condition.

**Caution:** Electricity and water are a bad combination. Protect the electric fan and power cord from exposure to water.

If the external flexible cable or cord is damaged, please do not to use it.

The repair of the damaged main connection cable is only allowed for a qualified technician.

### Warning:

Do not connect the chain to the supply while it is in the packaging. Use only with the transformer supplied.

To reduce the risk of fire or shock hazard, do not expose this product to rain, moisture or dust. In addition, do not touch the inflatable if your hand in wet.

Place the decoration item only on the ground which is free from snow, dirt, wetness, leaves etc.

For making sure a safe position, it is necessary to use all included fixing coils.

### Components:

Airblown inflatable figure	1pc
Fan	1pc
UL adaptor	1pc

### Instructions:

1. Remove contents from packaging.
2. Place inflatable in a clean , open area, free from obstruction or other debris.
3. Roll out fabric and lay out the contents.
4. Make sure the air intake located on the bottom of unit is clear of fabric and free of obstruction.
5. Make sure the zipper is fully closed on the back of unit.
6. Using the clip on the end of tether, attach one end to a ring grommets on the side of the inflatable.
7. Secure the metal stakes into ground and attach the nylon tethers.
8. To deflate, simply unplug from the outlet device and open zipper on back of inflatable.

### Trouble shooting checklist!

**If the motor is not working, the operation may be...**

The power source is interrupted or the cord may be unplugged.

Debris may be lodged in the motor.

Ensure zipper is securely closed so air stays inside figure.

### **Cleaning, Storage and maintenance instruction:**

Only use mild detergent with cold water to wipe clean the figure.

Leave inflated until completely dry.

Unplug, roll up and store in original package or similar size box.

Do not wipe clean the motor.

**This unit is not intended for use by children.**