

BATTERY INSTALLATION

Do not mix Alkaline, Standard (Carbon-Zinc) or Rechargeable (Nickel Cadmium) or (Nickel Metal Hydride) batteries; install only new batteries of the same type in your candle. For optimal efficiency and prolonged candle life, we suggest using alkaline batteries.

Remove the battery compartment lid; insert alkaline batteries as indicated on the candle bottom/battery compartment. Replace and close the battery compartment lid. It is advisable to place the candle on a soft surface to support the candle when installing or changing batteries.

AUTOMATIC TIMER

Your candle has three activation positions -- **OFF**, **4 Hour** and **8 Hour**. When in the **OFF** position your candle will remain inactive. When the timer position is selected in either the **4 Hour** or **8 Hour** position at any given time of the day, the flickering light will turn on and then automatically turn off after the selected time duration. The following day, if the switch setting has not been modified, the flickering light will automatically turn on at the same time and will automatically turn off after either 4 or 8 hours depending on the interval selected. To change starting time, cycle the switch to **OFF** and back to either **4 Hour** or **8 Hour** at the desired time.

Continuous flickering flame indicates batteries need to be changed.

The flameless candle should not be exposed to extreme weather such as heat, cold, rain or snow and are **intended for indoor use only**. Your flickering candle is made of wax and should not be placed near a heat source such as a radiator, stove, fireplace, etc. -- the extreme heat may melt the candle's wax.