


- 18) IT'S A BOY with snowfall light pattern
- 19) IT'S A GIRL with twinkling light pattern
- 20) CHEERS with zig-zag moving light pattern
- 21) WELCOME HOME with irregular dropping light pattern
- 22) HAPPY VALENTINE'S DAY with fade in fade out light pattern
- 23) JOYEUX NOEL with twinkling light pattern
- 24) HAPPY HALLOWEEN with zig-zag moving light pattern
- 25) TRICK OR TREAT with twinkling light pattern
- 26) BOO with zig-zag moving light pattern
- 27) BITE, DRINK, BE SCARY with twinkling light pattern
- 28) GIVE THANKS with fade in fade out light pattern
- 29) HAPPY FALL with irregular dropping light pattern
- 30) BLESS THIS HOME with zig-zag moving light pattern

#### D. INSTRUCTIONS:

2 in 1 Remote Control – to select from pre-programmed messages or program your own special message.

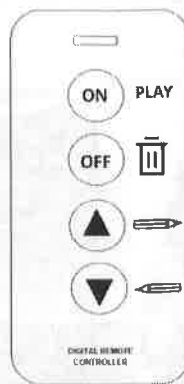

### Always point the Remote Control at the Sensor on top of the Control Box (See Fig.1)

To select a pre-programmed message:

- 1) Press the "ON" button to play. The first pre-programmed message "MERRY CHRISTMAS" will appear scrolling from right to left. Please refer to the list of the 30 pre-programmed messages.
- 2) Press ▲ and ▼ to select next message in ascending order or descending order.
- 3) The button on the control box (See Fig.1) can be pressed to scroll through the pre-programmed messages.
- 4) Press the "OFF" button to turn off the lights.

To enter your own special message:

- 1) Press the "ON" button for approximately 5 seconds and a vertical line of lights will appear on the left side of the banner. You can now start to enter your own message.
- 2) Select a letter or symbol by pressing ▲ and ▼ arrows up in ascending order or descending order. Contains "Space", "ABC...XYZ", "0123...789", "!, & ' \$ # %".
- 3) Enter each letter or symbol one by one. After you select a letter or a symbol, press the "ON" button once to confirm. A vertical line of lights will appear next to the letter or symbol selected.
- 4) Repeat until message is complete.
- 5) Press the "OFF" button to backspace or to delete a letter. A vertical line of lights will appear, you can now enter a new letter or symbol.
- 6) After the message is complete, press the "ON" button for approximately 5 seconds to confirm the message you entered. Your message will appear and start scrolling from right to left.
- 7) The message is saved temporarily. If you press the "OFF" button to turn off, your message will appear when pressing the "ON" button again. Your own message will be deleted when you unplug the item or press the "OFF" button for approximately 5 seconds to switch to the 30 pre-programmed messages mode.

# MINI LED BANNER

THIS PRODUCT IS NOT A TOY! Please read this entire instruction booklet before using. Keep this manual for future reference.

## INSTRUCTION MANUAL

### A. DESCRIPTION

Thank you for purchasing the **MINI LED BANNER**. This product is not a toy and is not intended for use by children. Decorative and for indoor / outdoor use.

### B. SETTING UP

1. Remove the light set from the package and unroll before use.
2. This item is for indoor / outdoor use.
3. Bulbs cannot be replaced.
4. Do not connect this light set to another light set.
5. Open the battery compartment cover (See Fig.1) and insert 3 x AA batteries (not included) into the battery compartment. Align "+" and "-" as marked inside the battery compartment.
6. Close the battery compartment cover.
7. Unit comes with a remote control with 1 x CR2025 battery (included).

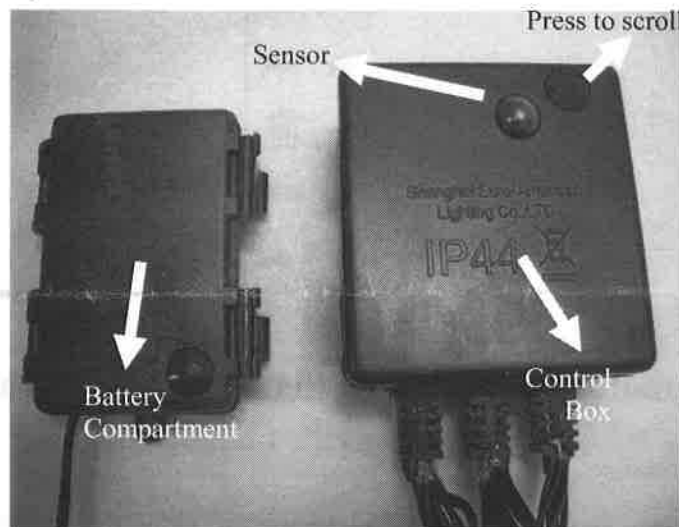


Fig.1

### C. PRE-PROGRAMMED MESSAGES

30 Messages will play in the following order:

- 1) MERRY CHRISTMAS with twinkling light pattern
- 2) HAPPY HOLIDAYS with chasing stripe pattern
- 3) HAPPY NEW YEAR with irregular dropping light pattern
- 4) SEASONS GREETINGS with chasing stripe pattern
- 5) FELIZ NAVIDAD with snowfall light pattern
- 6) BAH HUMBUG with zig-zag moving light pattern
- 7) MERRY AND BRIGHT with fade in fade out light pattern
- 8) HAVE A HOLLY JOLLY CHRISTMAS with chasing stripe pattern
- 9) PEACE ON EARTH with irregular dropping light pattern
- 10) LET IT SNOW with snowfall pattern
- 11) HO HO HO with chasing stripe pattern
- 12) JOY TO THE WORLD with irregular dropping light pattern
- 13) BABY IT'S COLD OUTSIDE with snowfall light pattern
- 14) BELIEVE with twinkling light pattern
- 15) IT'S A WONDERFUL LIFE with snowfall light pattern
- 16) HAPPY BIRTHDAY with zig-zag moving light pattern
- 17) CONGRATULATIONS with irregular dropping light pattern

*The following is only applicable to customers in the USA:*

*For more information about this product, please call 1-800-467-9627, or visit our website [www.mrchristmas.com](http://www.mrchristmas.com). We will be happy to help you!*

**FEDERAL COMMUNICATIONS COMMISSION, PART 15:**

**NOTES:** This equipment has been tested and found to comply with the limits for a Class B digital device pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If the equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to correct the interference by one or more of the following measures:

- (a) reorient or relocate the receiving antenna;
- (b) increase the separation between the equipment and the receiver;
- (c) connect the equipment to an outlet on a circuit different from that to which the receiver is connected;
- (d) consult the dealer or an experienced radio/TV technician for help.

**WARNING:**

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

**I. NINETY-DAY LIMITED WARRANTY**

Mr. Christmas warrants the original customer / purchaser of the **MINI LED BANNER** that they will be free from defects in material and workmanship for a period of ninety (90) days from date-of-purchase. Any liability under this warranty shall be limited to the repair or replacement of defective parts without charge if the item is returned with shipping charges prepaid together with proof of date-of-purchase, name and mailing address of the original consumer / purchaser. This warranty does not cover defects caused by damages in transit, abuse, accident, negligence or repairs made by others. This warranty gives the original consumer / purchaser specific legal rights. The original consumer / purchaser may also have other rights which vary from state to state.

## E. TROUBLESHOOTING

PROBLEM	LIKELY CAUSE	SOLUTION
No light	Unit is turned off	Press the "ON" button on the remote
	Desired pre-programmed message is not playing	Use the remote or black button on the control box to scroll to find the selected message
Pre-programmed or special message not playing	Unit is not in right mode	Please refer to section D for instructions

## F. BATTERY INSTRUCTIONS

1. Do not dispose batteries in fire. Batteries may explode or leak.
2. Do not mix old and new batteries.
3. Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
4. Replace batteries of the same brand.
5. Failure to insert batteries in the correct polarity, as indicated in the battery compartment, may shorten the life of the batteries or cause batteries to leak.
6. Remove fully discharged batteries immediately.
7. Remove all the batteries for storage of the unit to avoid battery leakage.
8. Batteries should be recycled or disposed of as per state and local guidelines.

## G. CARE INSTRUCTIONS

1. Before using or reusing, inspect product carefully. Discard any products that have cracks in enclosure or exposed wire.
2. When storing the product, carefully remove from the current location to avoid any undue strain or stress on the conductors, connections and wires.
3. When not in use, store neatly in a cool, dry location protected from sunlight and heat.
4. If necessary, clean product by wiping with a soft, dry cloth. Do not use any corrosive cleanser or chemical solution on this item.

## H. SAFETY INSTRUCTIONS AND WARNINGS

### WARNING:

**THIS IS NOT A TOY! THIS PRODUCT CONTAINS SMALL PARTS, WHICH COULD CAUSE CHOKING IF SWALLOWED.**

TO PREVENT FIRE OR SHOCK HAZARD, DO NOT REMOVE COVER. NO USER SERVICEABLE PARTS INSIDE. IF SERVICING IS NEEDED, SEND TO QUALIFIED SERVICE PERSONNEL.

### PLEASE ADHERE TO THE FOLLOWING:

1. **Read Instructions** - All safety and operating instructions should be read before the item is operated. Please adhere to the instructions and warnings for your safety.
2. **Heat** - The item should be situated away from heat sources such as radiators, hairdryers, heat registers, stoves or other appliances that produce heat.
3. **Damage Requiring Service** - Have a qualified service personnel service this item when:
  - a. Objects have fallen on the item.
  - b. The item has been dropped or the enclosure damaged.
  - c. All troubleshooting techniques have been tried and the item will not work or has stopped working.