



SET-UP / OPERATING INSTRUCTIONS FOR DANCING & SINGING SANTA

NOTE: YOUR FIGURE MAY BE DIFFERENT OR HAVE A DIFFERENT CLOTHE THAN THE ONE SHOWN FOR DEMONSTRATION.

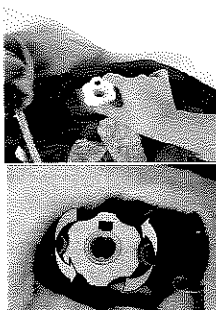

1. Carefully remove the figures head, body / base and AC low voltage adapter

2. To make the figures to stand up push down on the "knob" and turn the knob until the figure is extended and stand up.

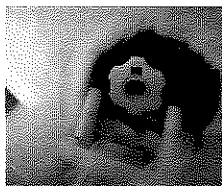

4. To attach head, line up tabs with slots on neck handle... ..turning head until it seats in neck base and face is looking straight ahead.

5. Insert the DC plug on the base, switch on the power, the adapter can use to 110 or 220V Power outlet Put the ON-OFF trigger to middle position.

6. Straighten costume, position arms and turn switch on base to "ON" do not block sound & press the red button on front of base. Enjoy your new Christmas Greeter!

SEE REVERSE SIDE FOR GENERAL INSTRUCTIONS.

*** IMPORTANT ***

TO AVOID POSSIBLE DAMAGE WHEN COLLAPSING, DO NOT DROP. REMOVE HEAD. GRASP NECK HANDLE BEFORE PUSHING RELEASE BUTTON. THEN EASE FIGURE DOWN.

**GENERAL INSTRUCTIONS
FOR " COLLAPSIBLE"
ANIMATED DISPLAY FIGURES**

***DELUXE, DANCING AND
MUSICAL DISPLAY FIGURES***

BASIC OPERATION:

1. Carefully remove from box. Do not pull figure out by arms.
2. See illustrated set-up instructions and photos on reverse side.
3. This figure is supplied with a low voltage adapter. Plug one end into a standard 110 or 220 volt household outlet.
4. The power ON / OFF switch is located next to adapter jack on base. Turn ON, press the red button and display will dance and sing.

SAFETY INSTRUCTIONS:

1. Read all instructions before this figure is operated and retain them for future reference.
2. All warnings in these operating instructions should be followed.
3. DO NOT use near water, such as bathtub, laundry tub, kitchen sink, wet basement or swimming pool, etc.
4. DO NOT place figure near any heat source such as radiators, stoves, fireplaces, etc.
5. This figure should be serviced by a qualified service person only. DO NOT attempt to service this unit beyond what is described in the operating instructions.
6. Take extra care when displaying any figure that may contain small parts around small children.
7. Do not restrict arm, head or waist motions. Figure have slip gears to prevent damage, however, prolonged restriction of moving parts may result in gear damage.
8. Display this figure on a steady level surface. **FOR INDOOR USE ONLY.**
9. When posing arms, ensure the adapter is unplugged from outlet.

READ CAREFULLY & RETAIN FOR FUTURE REFERENCE!