

# CHRISTMAS TREE

## Parts List


1. Circular stand - 3 pieces.
2. Pole sections - 6 pieces.
3. Lighting harness including tree top
4. Ground stakes x 3

## Assembly Instructions

1. Assemble the sections of the centre pole and insert into the stand ①.
2. Attach the tree top ② to the top of the pole and allow the wiring harness to dangle down. Arrange each strand in order. Attach each outer layer strand ③ to the appropriate outer hook on the stand.
3. If your tree has an inner layer, the inner wiring harness is attached to the centre pole. Attach each strand from this layer to the appropriate inner hook on the circular stand. Then attach the tree top to the top of the pole and allow the wiring harness strands to dangle down. Arrange each strand in order. Attach each outer layer strand ③ to the appropriate outer hook on the stand.
4. Unwind the lead wire, tighten the waterproofing ring on the adaptor and plug into an electrical source.
5. If installing outdoors, use the ground stakes to secure the tree in the ground.

## Important Safety Instructions

- a) When used outdoors, connect this product to a Ground Fault Circuit Interrupting (GFCI) outlet. If one is not available, contact a qualified electrician for proper installation.
- b) This seasonal product is NOT intended for permanent installation or use.
- c) Do not mount or place this product near gas or electric heaters, fireplaces, candles or other similar sources of heat.
- d) Do not secure the wiring of this product with staples or nails, or place on sharp hooks or nails.
- e) Unplug or turn off the product when leaving the house, retiring for the night or if it is left unattended.
- f) This is an electrical product, not a toy. To avoid risks of fire, burns, personal injury and electric shock, it should not be played with or placed where small children can reach it.
- g) Do not use this product for anything other than its intended use.
- h) Do not hang ornaments or other objects from the cord wire or lighting harness.
- i) Do not close doors or windows on the product or extension cords as this may damage the wire insulation.
- j) When in use, do not cover the product with cloth, paper or any other material that is not part of the product.
- k) Do not alter the adaptor. If the adaptor needs to be replaced, ensure the exact same input and output specs are used for the new adaptor.
- l) Before using or reusing, inspect the product carefully. Discard any products that have cut, damaged or frayed wire insulation or cords, cracks in the lamp-holders or enclosures, loose connections or exposed copper wire.
- m) When not in use, store neatly in a cool dry location protected from sunlight.

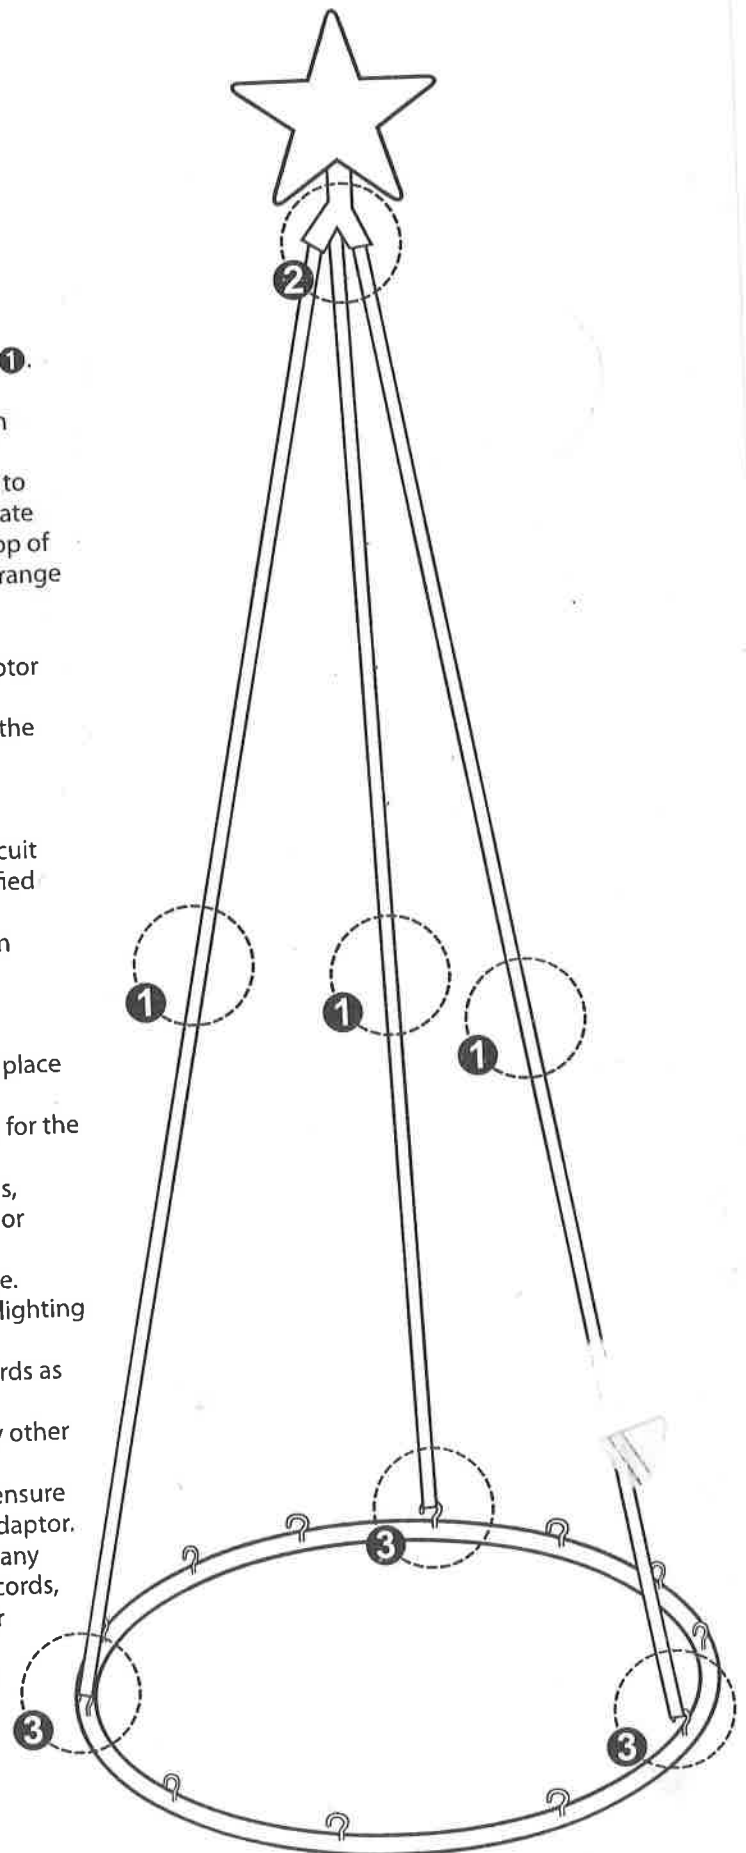

**FOR INDOOR OR OUTDOOR USE**