
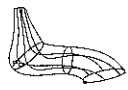 











PARTS LIST:

- A** antlers (left/right) 
- B** head 
- C** body 
- D** back legs (left/right) 
- E** front legs (left/right) 
- F** tail 
- G** R-clip 
- H** yard stakes (4 pcs) 
- I** bow 

 
STEP 1

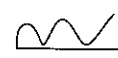

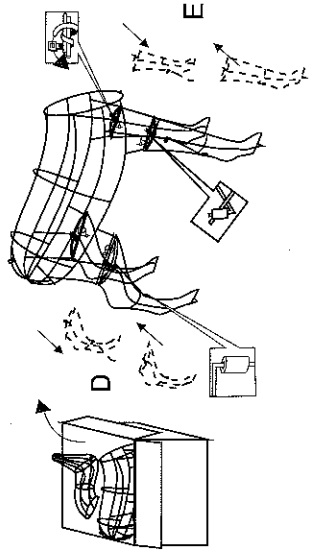
STEP 2

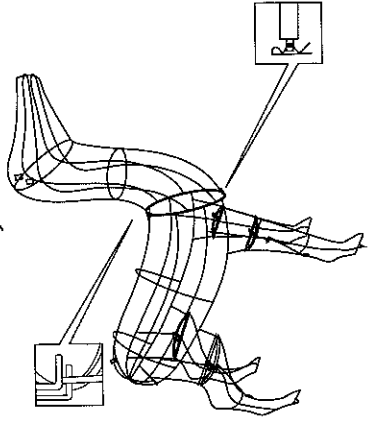

STEP 3

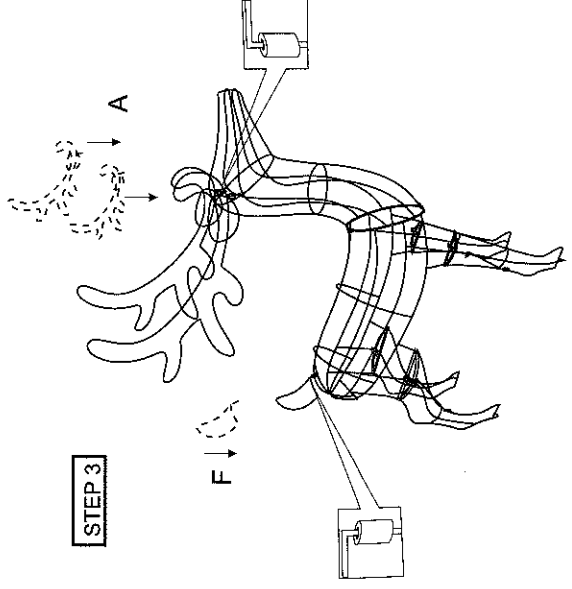

STEP 4

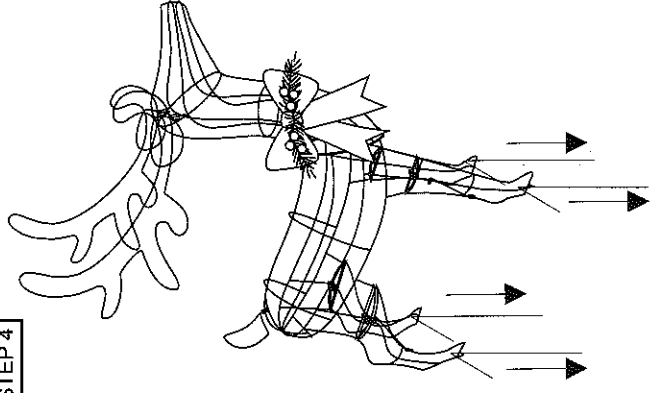

TOP VIEW



SIDE VIEW



TO USE: Bend plastic tie around wire sculpture pieces. Make sure ridges are on the inside so they will lock into place. Pull tight to secure.

STEP 1: Remove all contents from the packaging and then assemble the back legs(left/right)(D) and the front legs(left/right)(E) onto the body(C) by sliding the post into the slot and using plastic ties to secure. Turn around the pole on the right legs and slide them into the hole on the left legs for added security and stability.


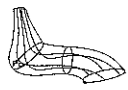 







STEP 2: Assemble the head(B) onto the body by hooking together and sliding the post into slot. Adding R-clip(G) to the hole of the post for added stability.

STEP 3: Attach the antlers(left/right)(A) onto the head(B) and attach the tail(F) onto the body(C).


STEP 4: Tie the bow onto the neck of the buck, then secure the buck onto the ground with yard stakes.

 CAUTIONS: The frame straps (plastic ties) shall not place around any conductors or wiring during assembly!

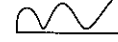
PARTS LIST:

- A** antlers (left/right) 
- B** head 
- C** body 
- D** back legs (left/right) 
- E** front legs (left/right) 
- F** tail 
- G** R-clip 
- H** yard stakes (4 pcs) 
- I** bow 


STEP 1

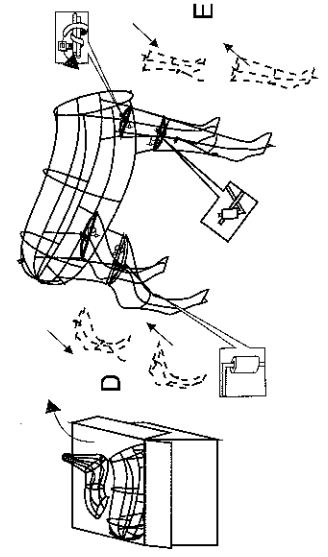


STEP 2

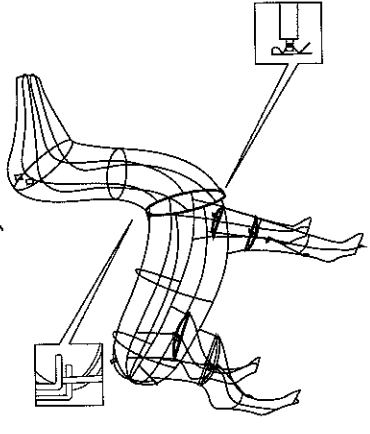

STEP 3

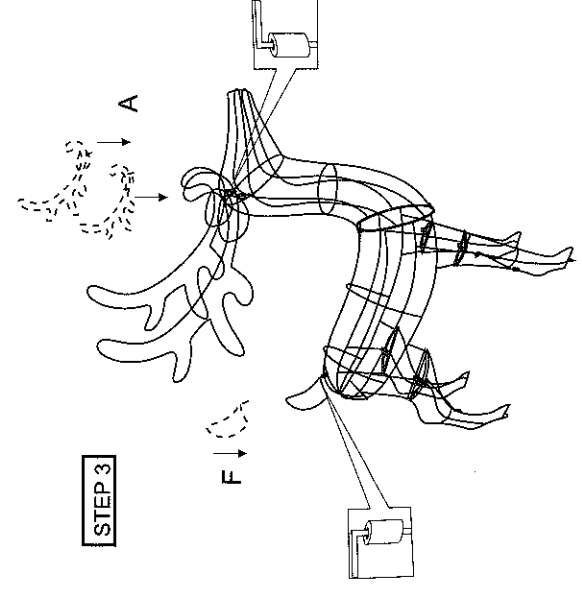


STEP 4

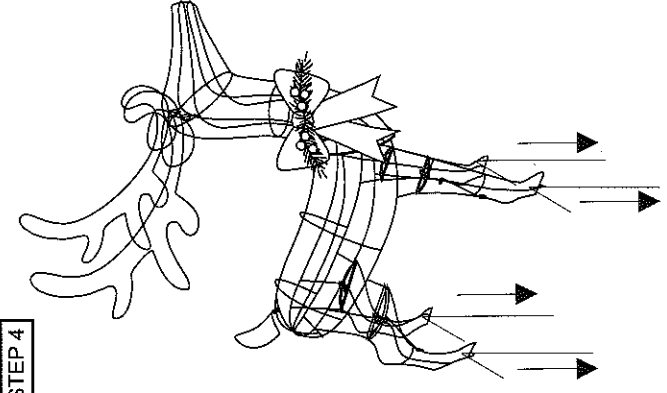

TOP VIEW



 SIDE VIEW



TO USE: Bend plastic tie around wire sculpture pieces. Make sure ridges are on the inside so they will lock into place. Pull tight to secure.

STEP 1: Remove all contents from the packaging and then assemble the back legs(left/right)(D) and the front legs(left/right)(E) onto the body(C) by sliding the post into the slot and using plastic ties to secure. Turn around the pole on the right legs and slide them into the hole on the left legs for added security and stability.

STEP 2: Assemble the head(B) onto the body by hooking together and sliding the post into slot. Adding R-clip(G) to the hole of the post for added stability.

STEP 3: Attach the antlers(left/right)(A) onto the head(B) and attach the tail(F) onto the body(C).

STEP 4: Tie the bow onto the neck of the buck, then secure the buck onto the ground with yard stakes.

CAUTIONS: The frame straps (plastic ties) shall not place around any conductors or wiring during assembly!

IMPORTANT SAFETY INSTRUCTIONS

When using electrical products, basic precautions should always be followed including the following:

- Do not use seasonal products outdoors unless marked suitable for indoor and outdoor use. When products are used in outdoor applications, connect the product to a Ground Fault Interrupting (GFI) outlet. If one is not provided, contact a qualified electrician for proper installation.
- This seasonal use product is not intended for permanent installation or use. Do not mount or place near gas or electric heaters, fireplaces, candles or other similar sources of heat.
- Do not secure the wiring of the product with staples or nails, or place on sharp hooks or nails.
- Do not let lamps rest on the supply cord or on any wire.
- Unplug the product when leaving the house, when retiring for the night, or if left unattended.
- This is an electric product - not a toy! To avoid risk of fire, burns, personal injury and electric shock it should not be played with or placed where small children can reach it.
- Do not use this product for other than its intended use.
- Do not hang ornaments or other objects from cord, wire, or light string.
- Do not close doors or windows on the product or extension cords as this may damage the wire insulation.
- Do not cover the product with cloth, paper or any material not part of the product when in use.
- This product is equipped with push-in type lamps. Do not twist lamps.
- This product employs overload protection (fuse). A blown fuse indicates an overload or short-circuit situation. If the fuse blows, unplug the product from the outlet. Also unplug any additional strings or products that may be attached to the product. Replace the fuse as per the user servicing instructions (follow product marking for proper fuse rating) and check the product. If the replacement fuse blows, a short-circuit may be present and the product should be discarded.
- Read and follow all instructions that are on the product or provided with the product.

SAVE THESE INSTRUCTIONS

Use And Care Instructions

- When the product is placed on a live tree, the tree should be well maintained and fresh. Do not place on live trees in which the needles are brown or break off easily. Keep the tree holder filled with water.
- If the product is placed on a tree, the tree should be well secured and stable.
- Before using or reusing, inspect product carefully. Discard any products that have cut, damaged, or frayed wire insulation or cords, cracks in the lampholders or enclosures, loose connections, or exposed copper wire.
- When storing the product, carefully remove the product from wherever it is placed, including trees, branches or bushes, to avoid any undue strain or stress on the product conductors, connections, and wires.
- When not in use, store neatly in a cool, dry location protected from sunlight.

User Servicing Instructions

Replace the fuse:

- Grasp plug and remove from the receptacle or other outlet device. Do not unplug by pulling on cord.
- Open fuse cover by sliding open the fuse access cover on top of the attachment plug towards blades.
- Remove fuse carefully.
- Risk of fire. Replace fuse only with 3 Amp, 125 Volt fuse (provided with product).
- Close fuse cover. Slide closed the fuse access cover on top of attachment plug. **Risk of fire.** Do not replace the attachment plug. Contains a safety device (fuse) that should not be removed. Discard product if the attachment plug is damaged.

Replace the lamp:

- Grasp plug and remove from the receptacle or other outlet device. Do not unplug by pulling on cord.
- Pull lamp and plastic base straight out of lampholder.
- Replace lamp with only 3.4 Volt, 0.41 Watt, regular brightness type lamp (provided with product).

If the new lamp base does not fit in lampholder, follow the steps below before step 3.

- Remove the base of burned out lamp by straightening lamp leads and gently pull lamp out.
- Thread leads of new lamp through holes in old base with one lead in each hole.
- After lamp is fully inserted into base, bend each lead up, like other lamps in the light set so that the leads will touch the contacts inside the lampholder.

CAUTION: To reduce the risk of fire and electric shock:

- Do not install on trees having needles, leaves or branch coverings of metal or materials which look like metal.
- Do not mount or support strings in a manner that can cut or damage wire insulation.
- For temporary (90 days max.) installation and use only.

CAUTION:

- To reduce the risk of overheating, replace burned-out lamps promptly. Use 3.4 Volt, 0.41 W lamps only.
- To reduce the risk of fire or electric shock securely fasten the access cover of the fuseholder before plugging in the lighting string or decorative outfit.

For Indoor and Outdoor Use, 120V 60 Hz 0.24A/28.8W

UL File No: E182191 Model No: H15004, Made in China

