

IMPORTANT SAFETY INSTRUCTIONS

When using electrical products, basic precautions should always be followed including the following:

- READ AND FOLLOW ALL SAFETY INSTRUCTIONS.**
- Do not use seasonal products outdoors unless marked suitable for indoor and outdoor use. When products are used in outdoor applications, connect the product to a Ground Fault Circuit Interrupting (GFCI) outlet.
- If one is not provided, contact a qualified electrician for proper installation.
- This seasonal use product is not intended for permanent installation or use.
- Do not mount or place near gas or electric heaters, fireplaces, candles or other similar sources of heat.
- Do not secure the wiring of the product with staples or nails or place on sharp hooks or nails.
- Do not let lamps rest on the supply cord or on any wire.
- Unplug the product when leaving the house, when retiring for the night, or if left unattended.
- This is an electric product-not a toy! To avoid risk of fire, burns, personal injury and electric shock it should not be played with or placed where small children can reach it.
- Do not use this product for other than its intended use.
- Do not hang ornaments or other object from cord, wire, or light string.
- Do not cover the product with cloth, paper or any material not part of the product when in use.
- Do not close doors or windows on the product or extension cords as this may damage the wire insulation.
- This product is equipped with push-in type lamps. Do not twist lamps.
- This product employs an overload protection (fuse). A blown fuse indicates an overload or short-circuit situation. Replace the fuse as per the user servicing instructions (follow product marking for proper fuse rating) and check if the fuse blows, unplug the product from the outlet.
- Read and follow all instructions that are on the product or provided with the product.

SAVE THESE INSTRUCTIONS

CAUTION:

This lighting string is rated 20.4 Watts (0.17Amps), do not overload. Connect other lighting strings or decorative outfits end-to-end up to a maximum of 216 Watts (1.8 Amps) total.
If connecting to a lighting string that does not have a wattage (W) rating (found on the tag within 6 inches of the plug), calculate the wattage as follows: Multiply the current, which is on the flag-type tag by 120.
For example: Lighting string is rated 120V, 60Hz, 0.17Amps. $0.17 \times 120V = 20.4 \text{ Watts}$
TOTAL AMOUNT OF WATTAGE THAT CAN BE CONNECTED $216W - 20.4W = 195.6 \text{ Watts}$


USE AND CARE INSTRUCTIONS

- Before using or reusing, inspect product carefully. Discard any products that have cut, damaged, or frayed wire insulation or cords, cracks in the bulbs or enclosures, loose connections, or exposed copper wire.
- When storing the product, carefully remove the product from wherever it is placed, to avoid any undue strain or stress on the product conductors, connections, and wires.
- When not in use, store neatly in a cool, dry location protected from sunlight.

USER SERVICING INSTRUCTIONS

TO REPLACE THE FUSE

- Before changing fuses, make sure the set is unplugged. Grasp plug and remove from the outlet. Do not unplug by pulling on cord.
- Open fuse cover. Slide open fuse access cover on top of attachment plug towards blades. (see diagram)
- Remove fuses carefully. Turn plug over to empty fuse compartment.
- Risk of fire. Replace fuses only with 3 Amp, 125 Volt fuses that are included in this set.
- Close fuse cover. Make sure the fuses are being properly seated in the fuse holder then push the fuse access door all the way back to completely cover the fuse holder
- Risk of fire. Do not replace attachment plug. Contains a safety device (fuse) that should not be removed. Discard product if the attachment plug is damaged.

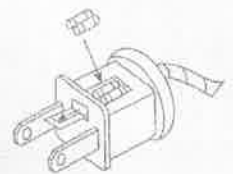


TO REPLACE THE BULB

- Grasp plug and remove from the outlet, do not unplug by pulling on cord.
- Unlock the burned out bulbs by lifting the hook and pull bulb and plastic base straight out of bulb holder as shown in Fig. 1.
- Insert the spare bulb into the lampholder in correct direction and lock the hook of bulb base by pushing hook down into the tab as shown in Fig. 2.
- To reduce the risk of overheating, replace burned-out bulbs promptly. Replace bulbs with only 2.5 Volt, 0.43 Watt super bright type bulbs provided with this product.

If the bulb base of the replacement bulb does not fit in the string:

- Straighten the two wires on the end of the original burned-out bulb and remove the bulb base.
- Straighten the two wires on the end of the new bulb and remove the bulb base.
- Insert the two wires of the new bulb into the two holes of the original bulb base and bend the wires upward.

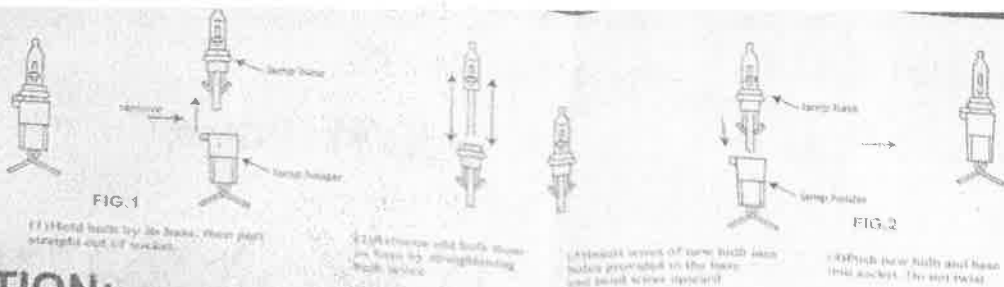

CAUTION:

To reduce the risk of fire and electrical shock:

- Do not install near trees, leaves or branches or other metal materials.
- Do not mount or support strings in a manner that can cut or damage wire insulation.
- To reduce the risk of overheating replace burned-out bulbs promptly. Use 2.5 volt, 0.43 watts super bright type bulbs only.
- Risk of fire. This product contains bulb shunts which allow product to operate if one bulb burns out. Do not replace bulbs with other than the spare bulbs provided with this product.

DIRECTIONS:

Always test your light set before decorating. Make sure that all bulbs are firmly in their sockets. Never twist bulbs since this can cause part of the set to go out. If a bulb burns out, replace it promptly to prolong the life of other bulbs. (See bulb replacement instructions)

ATTENTION:

Due to the nature of the material used, loss of some decorative material during shipment and assembly is to be expected. Please dispose of this material and keep out of reach of children. The loss of decorative material will not diminish the beauty of this item.

WARNING:

Never leave product unattended while plugged in. Read important safety instruction cautions inside. This item is for decoration only. This is not a toy or intended for use by children. For adult use only. It should not be played with or placed where children can reach it.

FOR INDOOR AND OUTDOOR USE

2.5 Volt, 0.43 Watts, 20 Bulbs

MODEL No: DLH-MKP-0021B

UL FILE NO: E51567E

MADE IN CHINA

PACKAGE CONTENTS

Part	Description	Qty
A	Upper body	2 pcs
B	Lower body	2 pcs
C	Wing	2 pcs
D	Horn	1 pc
E	Hands	2 pcs
F	Base	1 pc
G	Ground stakes	7 pcs
H	Plastic ties	20 pcs
I	Rope	3 pcs

REPLACEMENT PARTS LIST

Description	Quantity
Spare bulb	2 pcs
Fuse	2 pcs

