

SET-UP / OPERATING INSTRUCTIONS FOR DANCING & SINGING SANTA

NOTE: YOUR FIGURE MAY BE DIFFERENT OR HAVE A DIFFERENT CLOTHE THAN THE ONE SHOWN FOR DEMONSTRATION




1. Carefully remove the figures head, body / base and AC low voltage adapter




2. To make the figures to stand up push down on the "knob" and turn the knob until the figure is extended and stand up.



4. To attach head, line up tabs with slots on neck handle... ..turning head until it seats in neck base and face is locking straight ahead.

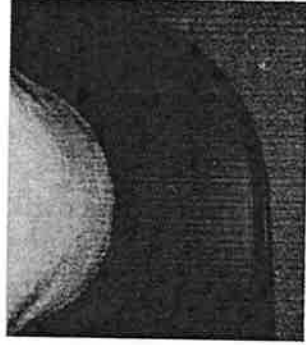

5. Insert the DC plug on the base, switch on the power, the adapter can use to 110 or 240V Power outlet, do not block sound & press 50/60Hz **OUTPUT: DC 5V 1000mA** Put the ON-OFF trigger to middle position.

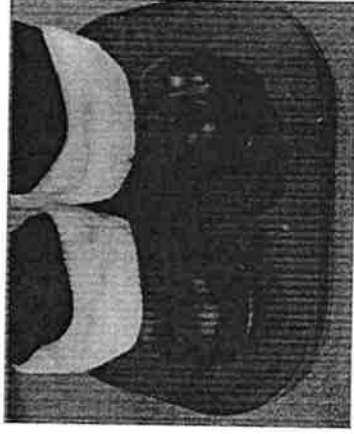

6. Straighten costume, position arms and turn switch on base to "ON"

SEE REVERSE SIDE FOR GENERAL INSTRUCTIONS

*** IMPORTANT ***

TO AVOID POSSIBLE DAMAGE WHEN COLLAPSING - DO NOT DROP - REMOVE HEAD - GRASP NECK HANDLE BEFORE PUSHING RELEASE BUTTON, THEN EASE FIGURE DOWN