 


FF 28098 INSTRUCTIONS

PACKAGE CONTENTS

FF28098

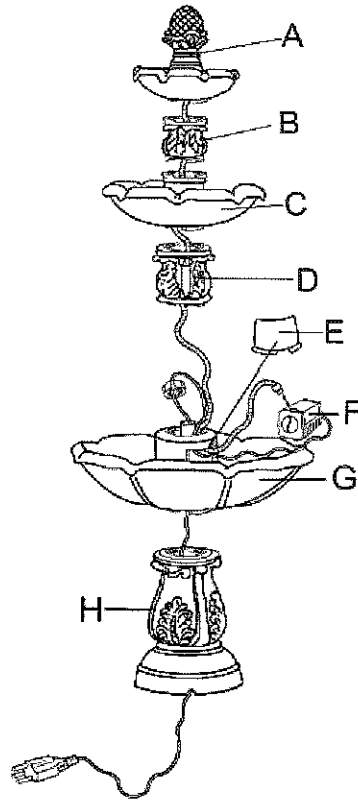

Part	Description	Quantity	Part	Description	Quantity
A	Top portion	1	B	Upper column	1
C	Top basin	1	D	Middle column	1
E	Cover plate	1	F	Pump	1
G	Middle basin	1	H	Base column	1

PREPARATION

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and diagram above.

Estimated Assembly Time: 50 minutes

Tools Required for Assembly: No tools needed

SAFETY PRECAUTIONS

This fountain may be used outdoors only.

Place your fountain in a location where any water spills or splashing will not reach any other electrical equipment or cause damage.

The product should be handled with lightly, do not knock with the hard article in case of being broken.

Choose an appropriate location before installing the fountain. DO NOT lift, push or drag the base to relocate the fountain when it's filled with water. Empty the base before lifting.

 
Excessive weight or pressure on any of the fountain sections may cause it to tip or fall over. Keep pets and children away from any of the fountain sections.

The pump on your fountain has no user serviceable parts. Only an authorized service representative should service the pump. Do not open the sealed pump housing as this may result in electrical shock. Refer to enclosed pump maintenance guide for cleaning.

Some splashing may occur. To avoid injury from electrical shock, observe basic safety precautions and comply with the following instructions:

1. Install the fountain pump correctly before operating it.
2. DO NOT allow the pump to run dry.
3. An adult should supervise children when they are around the pump.
4. Use the proper power source as indicated on the pump label.
5. Equip the electrical power for the pump with a ground fault circuit interrupter (GFCI).
6. If any water leakage occurs, turn off the circuit breaker immediately.
7. If any leakage occurs around the pump housing, turn off the circuit breaker immediately and have the pump serviced by a registered technician.
8. Do not operate the fountain if the pump has been dropped or has a damaged power cord or plug.
9. If the plug or your wall receptacle gets wet due to water dripping down the power cord or for any other reason, do not remove the plug from the wall outlet until the circuit breaker is turned off.


NOTE: Allow the pump power cord to hang at a lower level than the wall outlet to form a "drip loop". This will help prevent water from dripping down the power cord and getting into the wall outlet.



10. Always unplug the fountain pump and any other independent electrical accessories from the outlet when not in use and before cleaning or replacing parts.
11. Disconnect the power cord from the outlet by holding the plug, not by pulling on the power cord.
12. Periodically change the water. Clean the fountain water base, the pump's outlet nozzle and the water tube for dirt and debris with a damp cloth if necessary.
13. Always use the pumps we supply.
14. Periodically cleaning and changing of water is suggested. Avoid stagnant water due to the formation of sticky residue.
15. Periodically add clean water to keep pump submersed in water.
16. Do not expose the pump to direct sunlight or to low temperatures for any period of time.
17. Keep the power cord away from high temperatures or heat sources.
18. Use only a UL-approved extension cord of the correct rating to avoid overheating.
19. Do not use attachments which are not provided by the manufacturer, since they may cause an unsafe condition.
20. Do not use the pump for anything other than its intended use.
21. This fountain pump is not intended for commercial use.

ASSEMBLY INSTRUCTIONS

 FF28098

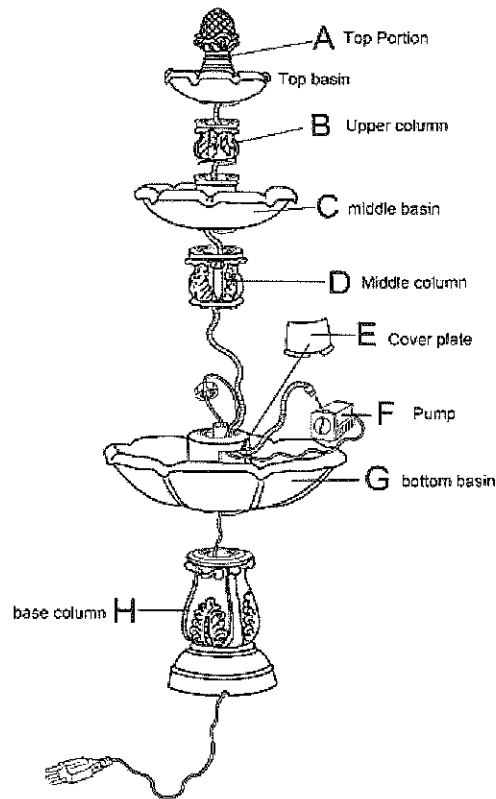

Step 1: Remove the product from the box, choose the place to install fountain. place the base on the level surface.

Step 2: Connect groove tray between base column (H) and bottom basin (G), make their black arrowhead mark in the same position, and then turn them tightly. Make sure the power cord of pump plug into the base and come out from the outlet hole.

Step 3: Connect groove tray between middle column (D) and lower column, make their black arrowhead mark in the same position, and then turn them tightly.

Step 4: Connect groove tray between middle basin (C) and middle column (D), make their black

arrowhead mark in the same position, and then turn them tightly.

Step 5: Connect groove tray between upper column (B) and top basin, make their black arrowhead mark in the same position, and then turn them tightly.

Step 6: Connect groove tray between top portion (A) and upper column (B), make their black arrowhead mark in the same position, and then turn them tightly. Pay attention to pass through PVC plastic tube from the middle of groove tray for each tier.

Step 7: Connect PVC plastic tube to the outlet nozzle of pump (F), and place the pump inside bottom basin smoothly.

Step 8: Attach the cover plate (E).

Step 9: Fill bottom basin (G) with water. Make sure the pump (F) is completely submerged in water. In order to have best effect, the water level should be 3/4 inch lower than brim of bottom basin.

Step 10: Plug the pump power cord to the wall outlet, turn on the switch. The fountain begin to work, In case of uneven water flowing, cut off the power 3 or 4 times for improvement

TROUBLESHOOTING

1. If your FOUNTAIN PUMP fails to operate please check the following:
 - a) Make sure the pump is it plugged into the socket properly.
 - b) Check the water level in the fountain. Make sure the pump fully immersed in water.
 - c) Check the setting of the flow control on the pump. Check the pump outlet nozzle and PVC plastic tube for dirt and debris. Clean if necessary.
 - d) Make sure the pump is connected to PVC plastic tube tightly.
 - e) The pump may be "air locked". Plug and unplug the pump several times to clear any air that may have been trapped.
2. If the water does not flow out of the fountain, it may be caused by kinked or loose PVC plastic tube make sure PVC plastic tube is connected properly.



Be careful not to spill water onto the plug of the pump. DO NOT allow the pump to run dry!

REPLACEMENT PARTS LIST

For replacement parts, please call our customer service department at 1-866-321-0399, Monday through Friday from 8:00am to 5:00pm, or email customer service at allengroupintl@gmail.com.

Part	Description	Model no./Ratings	Quantity
H	Pump	Jebao PP-388. 120V 0.195A 60HZ	1
E	Nut	M6	3