 


FF 27759 INSTRUCTION

PACKAGE CONTENTS

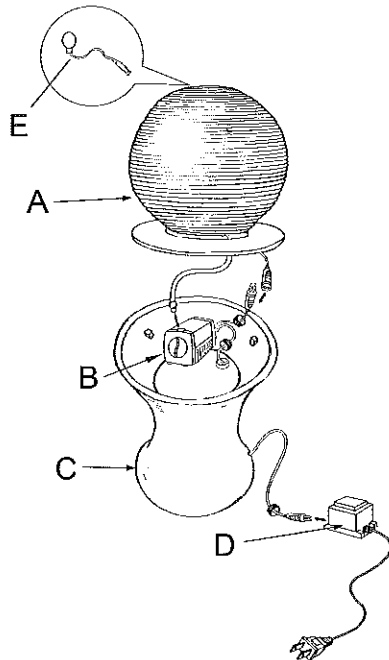

Part	Description	Quantity	Part	Description	Quantity
A	Ball	1	D	Transformer	1
B	Pump	1	E	Led Light	1
C	Base	1			

PREPARATION

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and diagram above.

Estimated Assembly Time: 30 minutes

Tools Required for Assembly: No tools needed

SAFETY PRECAUTIONS

This fountain can be used both indoors and outdoors .

Place your fountain in a location where any water spills or splashing will not reach any other electrical equipment or cause damage.

 
Choose an appropriate location before installing the fountain. **DO NOT** lift, push or drag the base to relocate the fountain when it's filled with water. Empty the base before lifting.

Excessive weight or pressure on any of the fountain sections may cause it to tip or fall over. Keep pets and children away from any of the fountain sections.

Some splashing may occur. To avoid injury from electrical shock, observe basic safety precautions and comply with the following instructions:


The pump on your fountain has no user serviceable parts. Only an authorized service representative should service the pump. Do not open the sealed pump housing as this may result in electrical shock. Refer to enclosed pump maintenance guide for cleaning.

1. Install the fountain pump correctly before operating it.
 2. **DO NOT** allow the pump to run dry.
 3. An adult should supervise children when they are around the pump.
 4. Use the proper power source as indicated on the pump label.
 5. Equip the electrical power for the pump with a ground fault circuit interrupter (GFCI).
 6. If the entire fountain falls into the water accidentally, turn off the circuit breaker immediately.
 7. If any leakage occurs around the pump housing, turn off the circuit breaker immediately and have the pump serviced by a registered technician.
 8. Do not operate the fountain if the pump has been dropped or has a damaged power cord or plug.
 9. If the plug or your wall receptacle gets wet due to water dripping down the power cord or for any other reason, do not remove the plug from the wall outlet until the circuit breaker is turned off.
- NOTE:** Allow the pump power cord to hang at a lower level than the wall outlet to form a "drip loop". This will help prevent water from dripping down the power cord and getting into the wall outlet.
10. Always unplug the fountain pump and any other independent electrical accessories from the outlet when not in use and before cleaning or replacing parts.
 11. Disconnect the power cord from the outlet by holding the plug, not by pulling on the power cord.

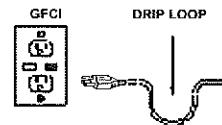

12. Periodically change the water. Clean the fountain water base, the pump's outlet nozzle and the water tube for dirt and debris with a damp cloth if necessary.
13. If the fountain is not going to be used for a long period time, remove the plug from the power supply outlet.
14. Do not expose the pump to direct sunlight or to low temperatures for any period of time.
15. Keep the power cord away from high temperatures or heat sources.
16. Use only a UL-approved extension cord of the correct rating to avoid overheating.
17. Do not use attachments which are not provided by the manufacturer, since they may cause an unsafe condition.
18. Do not use the pump for anything other than its intended use.
19. This fountain pump is not intended for commercial use.

 ASSEMBLY INSTRUCTIONS

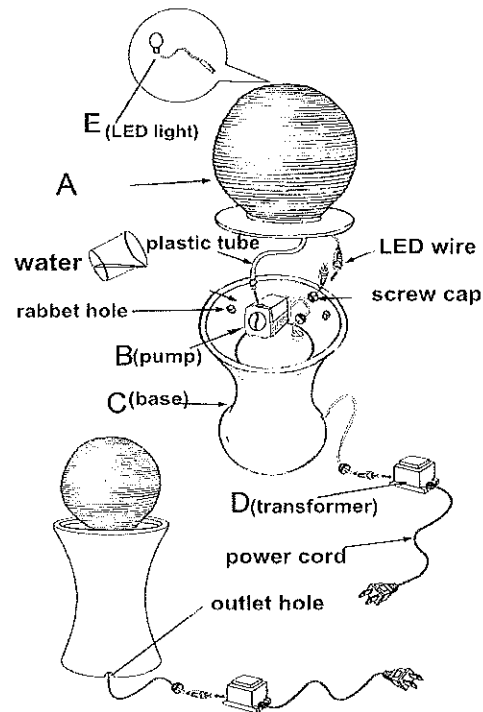

Step 1: Remove the product from the box; place the products on the level surface.

Step 2: choose the place to install fountain.

Step 3: Put the base (C) on a level surface.

Step 4: Connect the pump (B) with PVC plastic tube. Connect LED wire with pump output line, Then screw the screw cap tightly.

Step 5: Place top ball (A) on the support station of the base (C), make sure to connect the rabbet between ball's bottom board edge and base (C). And pay attention to have the pump power cord pass through the outlet hole of the base(C).

Step 6: Fill the base with clean water. Make sure the pump (B) is completely submerged in water. In order to have best effect, the water level should be ¼ inch (2 cm) below the brim of base.

Step 7: Connect the pump (B) with transformer (D).

Step 8: Plug the pump power cord to the wall outlet, turn on the switch to run the fountain.

Reverse the steps in the assembly instructions to replace the pump (C).



**Be careful not to spill water onto the plug of the pump.
DO NOT allow the pump to run dry!**

TROUBLESHOOTING

1. If your FOUNTAIN PUMP fails to operate please check the following:
 - a) Make sure the pump is plugged into the socket properly.
 - b) Check the water level in the fountain. Running the pump without sufficient water can damage the pump.
 - c) Check the setting of the flow control on the pump. Check the pump outlet nozzle and PVC plastic tube for dirt and debris. Clean if necessary.
 - d) Make sure the pump is connected to PVC plastic tube tightly. Check the fountain tubing for kinks and obstructions (refer to assembly step 2).
 - e) The pump may be "air locked". Plug and unplug the pump several times to clear any air that may have been trapped.
2. If the water does not flow out of the fountain, it may be caused by kinked or loose PVC plastic tube, make sure PVC plastic tube is connected properly.

WARNING

- Do not connect to any voltage other than that shown on the pump.
- Do not pump flammable liquids.
- To reduce the risk of electrical shock, use only on portable self-contained fountains no larger than 1.5 m in any dimension.
- The pump do not use in the water over than 1.5m depth.
- Do not use with water above 35°C.
- The supply cord cannot be replaced. If the cord is damaged the appliance should be scrapped.

CAUTION

Always disconnect from electrical outlet before handling the pump.

Don't operate without water.

Do not lift the pump by the power cord.

Operate in freshwater only.

Operate pump completely submerged for proper cooling.

Not for swimming pool.

This product must not be disposed together with the domestic waste. This product has to be disposed at an authorized place for recycling of electrical and electronic appliances.

By collecting and recycling waste, you help save natural resources, and make sure the product is disposed in an environmental friendly and healthy way.

PERFORMANCE

A clogged or dirty intake screen will greatly reduce performance.

If the pump is used on a dirty surface, raise it slightly to reduce the amount of debris contacting the intake. If less flow is desired, adjust the flow control lever on the side of the pump or restrict the discharge flow.

Do not let the pump run when not submerged in water. Doing so may damage the pump. Always submerge the pump first, and then plug in the electrical outlet. At the beginning, it probably can't pump water, because there is air in the pump and the tube. Don't worry about it. Please pull out and insert electrical outlet several times, it will work very well at once.

The pump is to be supplied through a residual current device (RCD) with a rated residual operating current not exceeding 30mA.

 
MAINTENANCE

To clean the pump, remove the back cover and the impeller.

Use a small brush or stream of water to remove any debris

CAUTION: The pump shaft can not be removed. **IF THE PUMP FAILS TO OPERATE, CHECK THE FOLLOWING:**

- Check the circuit breaker and try another outlet to ensure the pump is getting electrical power. **NOTE:** Always disconnect from electrical outlet before handling the pump.
- Check the pump discharge and tubing for kinks and obstructions. Algae build up can be flushed out with a garden hose.
- Check the inlet to ensure it is not clogged with debris.
- Remove the pump inlet to access the impeller area. Turn the rotor to ensure it is not broken or jammed.
- Monthly maintenance will add to your pump's life. **NOTE:** Ensure that the electrical cord loops below the electrical outlet to form a "Drip Loop" This will prevent water from running down the cord into the electrical outlet.

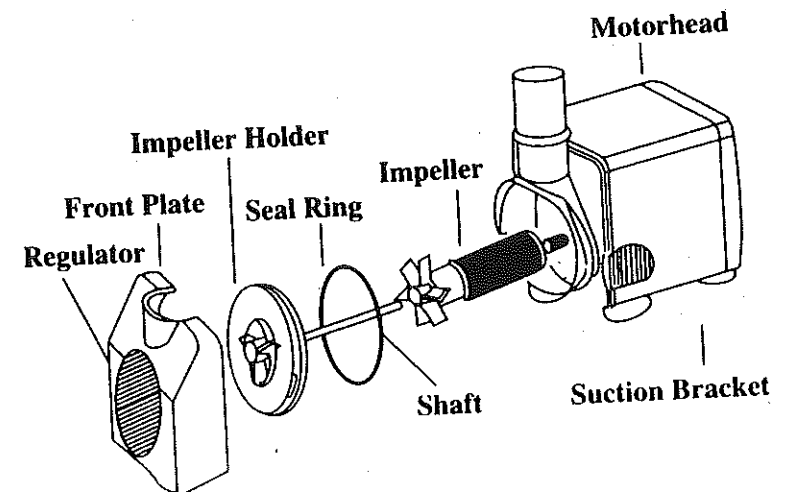

LIMITED WARRANTY

This product is guaranteed for a period of 12 months from date of purchase for material or manufacturing defects. Certificate of guarantee must be filled out completely by resale dealer and must accompany equipment along with the receipt, in case it is submitted for repair. Guarantee consists in guaranteed substitution of defective parts. Guarantee is considered void in case of improper use, nor does it answer to damages caused by improper handling or negligence on the part of the buyer. All equipment must be sent postage paid.

DISTRIBUTED BY:

Jebao Electrical Appliances Co., Ltd.
Tongmao Industrial Park, Dongsheng,
Zhongshan, Guangdong China.
Email: info@jebao.com
Website: www.jebao.com
Tel: +86-760-28136722, 28136716
Fax: +86-760-28136725

Jebao®

捷寶

SUBMERSIBLE PUMP

OWNER'S MANUAL

Model: INTRODUCTION

Jebao pumps are carefully inspected and tested to ensure both safety and operating performance. However, failure to follow the instructions and warnings in this manual may result in pump damage and/or serious injury. Be sure to read and save this manual for future reference.

