




15' ANIMATED WITCH

Thank you for your purchase of our giant 15-foot animated and talking Halloween witch. Below you'll find assembly instructions and other information to get maximum enjoyment from your purchase!

These instructions contain important information. Please keep them for future reference.

PACKAGE CONTENTS

Labeled Parts:

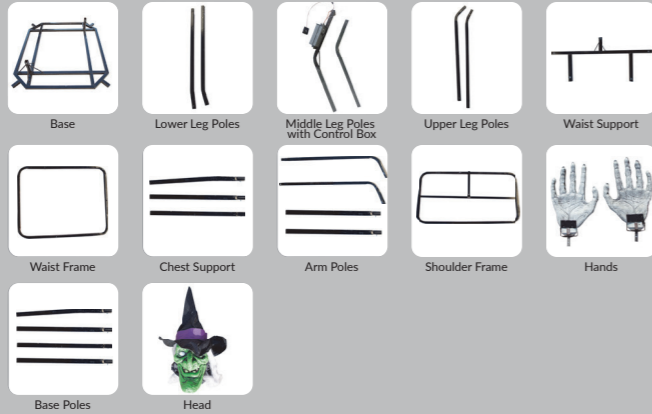

Unlabeled Parts:



PREPARATION

Estimated assembly time: 15-30 minutes.


Assemble the witch in your desired location. Moving after assembly is not recommended. Before assembling the product, carefully remove all parts from the box and lay out on a flat surface.

Make sure all parts are present. Compare parts with package contents list.


If any part is missing or damaged, do not attempt to assemble, install, or operate the product.

Read through directions before assembling.

ASSEMBLY INSTRUCTIONS PG. 1

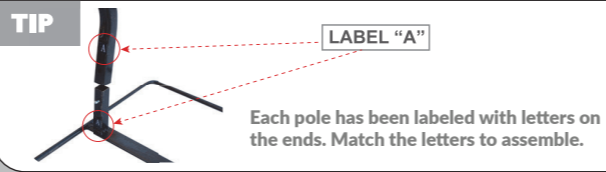

Let's start assembling!

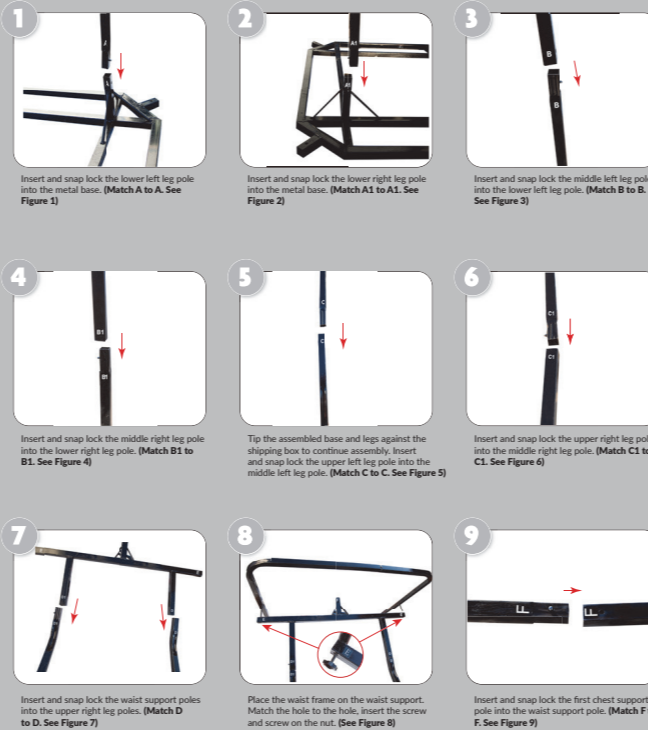

ASSEMBLY INSTRUCTIONS PG. 2



ASSEMBLY INSTRUCTIONS PG. 3




22 Insert and snap lock the right hand pole into the right arm curved pole. (Match L1 to L1. See Figure 22)



23 Thread one rope in the sleeve through the ziptie on the hand and tie them together to fasten the sleeve. (See Figure 23)



24 Thread the wire of the head through the shoulder frame to the body inside. (See Figure 24)

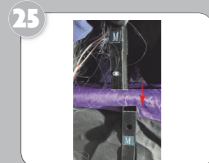


25 Insert and snap lock the head into the shoulder frame. (Match M to M. See Figure 25)



26 Tie the last two ropes together on the shoulder frame to cover the shoulder frame. (See Figure 26)




27 Pull the wires out through the body. (See Figure 27)

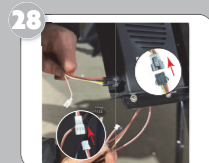

28 Connect the wires from the body to the corresponding wires of the control box. (See Figure 28)



29 Attach the hook and loop from the control box to the inside right knee. (See Figure 29)

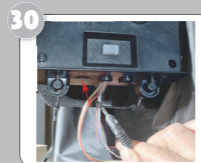

30 Plug the Try Me button into the corresponding hole of the control box. (See Figure 30)



31 Plug the adapter into the corresponding hole of the control box. (See Figure 31)



32 Thread the Try Me button and the adapter through the hole on the right knee and put them on the ground. (See Figure 32)




33 Attach the loop and hook on the right knee to cover the hole. (See Figure 33)


ASSEMBLY INSTRUCTIONS PG. 4



34 Assistance is required for this step. Stand the entire frame upright. Make sure one person is in the front. Place one foot on the base to keep it from sliding forward. (See Figure 34)

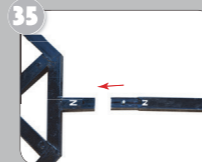

35 Insert and snap lock the base poles into the base. (Match N to N. See Figure 35)

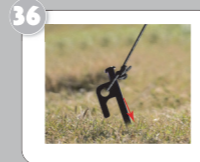

36 Pull the 4 tether lines out and fasten them to the stakes. Secure the ground stakes by inserting them into the ground. (See Figure 36)



37 Make final adjustments to the clothing as needed. (See Figure 37)

NOTE:



1. Assemble the plug end of the adapter by inserting the cord.



2. Slide the collar forward.



3. Turn the collar clock-wise to secure.

OPERATION INSTRUCTIONS

Plug the power adapter into a standard power outlet and adjust the settings on the function control box to your liking.

This witch has 3 operation settings found on the main function control box on the middle leg pole.

Sensor: This switch mode will activate lights, sound, and animation when the Infra-red (IR) sensor is activated and will operate for 1 audio-cycle with each activation. The infra-red (IR) sensor has a range of up to 2m/6.5ft. and will activate when someone comes within an 80-degree angle from left-to-right, as well as from above and below.

On: This switch mode will continuously operate the lights, sound, and animation of the item.


Off/Try Me: This switch mode allows the item to be activated only if triggered by using the Try Me Button. The item will operate for one audio cycle with each Try Me activation. Refer to assembly instructions in step 30 for further details.

Volume: Raise or lower the volume using the volume control turn dial. Fully rotate the volume control counter-clockwise to turn the voice off.

STORAGE: Do not discard box as it should be used for storage. Return all parts to the original packaging. Store in a cool, dry location.

SAFETY WARNINGS: Remove all plastic fasteners and tags. These are part of the packaging and should be discarded. For indoor and outdoor use. This item is not a toy and should be used for decorative purposes only.

Input: 100-240V 50/60Hz 0.5A MAX Output: 5.9V 1.5A

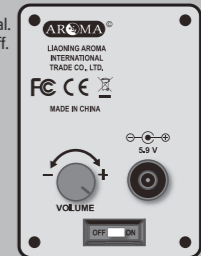

WARNING

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause interference
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits of a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications, however, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the distance between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.