

IMPORTANT SAFETY INSTRUCTIONS

When using electrical products, basic precaution should always be followed including the following:

- a) **READ AND FOLLOW ALL SAFETY INSTRUCTIONS.**
- b) Do not use seasonal products outdoors unless marked suitable for indoor and outdoor use. When products are used in outdoor applications, connect the product to a Ground Fault Circuit Interrupting(GFCI) outlet. If one is not provided, contact a qualified electrician for proper installation.
- c) This seasonal use product is not intended for permanent installation or use.
- d) Do not mount or place near gas or electric heaters, fireplace, candles or other similar sources of heat.
- e) Do not secure the wiring of the product with staples or nails, or place on sharp hooks or nails
- f) Do not let lamps rest on the supply cord or on any wire
- g) Unplug the product when leaving the house, when retiring for the night, or if left unattended.
- h) This is an electric product-not a toy! To avoid risk of fire, burns, personal injury and electric shock it should not be played with or placed where small children can reach it.
- i) Do not use this product for other than its intended use.
- j) Do not hang ornaments or other objects from cord, wire, or lighting string
- k) Do not close doors or windows on the product or extension cords as this may damage the wire insulation
- l) Do not cover the product with cloth, paper or any material not part of the product when in use.
- m) This product is equipped with push-in type lamps. Do not twist lamps.
- n) This product employs overload protection(fuse). If the fuse blows, unplug the product from the outlet. Also unplug any additional strings or products that may be attached to the product. Replace the fuse as per the user servicing instructions(follow product marking for proper fuse rating) and check the product. If the replacement fuse blows, a short-circuit may be present and the products should be discarded.
- o) Read and follow all instructions that are on the product or provided with the product .

p) SAVE THESE INSTRUCTIONS

USE AND CARE INSTRUCTIONS

- a) When the product is placed on a live tree, the tree should be well maintained and fresh. Do not place on live trees in which the needles are brown or break off easily. Keep the tree holder filled with water.
- b) If the products is placed on a tree, the tree should be well secured and stable.
- c) Before using or reusing, inspect product carefully. Discard any products that have cut, damaged or frayed wire insulation or cords, cracks in the lamp holders or enclosures, loose connections, or exposed copper wire.
- d) When storing the product, carefully remove the product from wherever it is placed, including trees, branches, or bushes, to avoid any undue or stress on the product conductors, connections, and wires.
- e) When not in use, store neatly in a cool, dry location protected from sunlight.

CAUTION

To reduce the risk of fire and electrical shock:

- a) Do not install on trees having needles, leaves or branch coverings of metal or materials that look like metal.
- b) Do not mount or support strings in a manner that can cut or damage wire insulation.

USER SERVICING INSTRUCTIONS


REPLACE THE LAMP

Step 1: Grasp plug and remove from the receptacle or other outlet device. Do not unplug by pulling on cord.

Step 2: Pull lamp and plastic base out.

Step 3: Replace lamp with only 2.5 volt (0.425 W), super bright type lamp (provided with product).


Step 4: Push new lamp/base assembly into lamp holder.

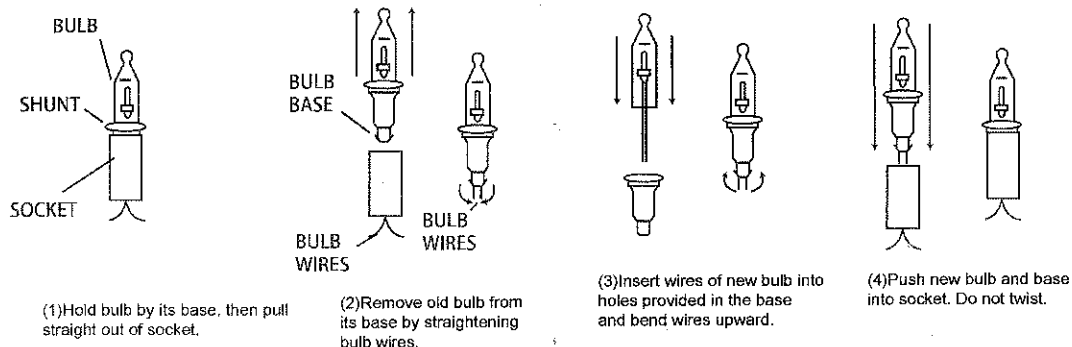

REPLACE THE FUSE

Most often, fuses blow because too many sets have been strung end-to-end. Please do not string together more than three(3) miniature bulb light sets.

- Before changing fuses, make sure the set is unplugged. Grasp plug and remove from the receptacle or other outlet device. Do not unplug by pulling on cord.
- Open fuse cover. Slide open fuse access cover on top of attachment plug towards blades.(see diagram)
- Remove fuses carefully. Turn plug over to empty fuse compartment.
- Risk of fire. Replace fuses only with 3 Amp, 125 Volt fuses that are included in this set.
- Close fuse cover. Make sure the fuses are being properly seated in the fuse holder then push the fuse access door all the way back to completely cover the fuse holder.
- Risk of fire. Do not replace attachment plug. Contains a safety device (fuse) that should not be removed. Discard product if the attachment plug is damaged.

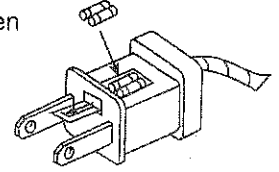

CAUTION:

To reduce the risk of overheating, replace burned-out lamps promptly. Use 2.5 volt, 0.425 watt lamps only.

DIRECTIONS


Always test your light set before decorating. Make sure that all bulbs are firmly in their sockets. Never twist bulbs since this can cause part of the set to go out. If a bulb burns out, replace it promptly to prolong the life of other bulbs.(See bulb replacement instructions).

ATTENTIONS: Due to the nature of the material used, loss of some debris material during shipment and assembly is to be Please dispose of debris and keep out of reach of children. Its beauty will not be diminished by the amount of debris.

FOR INDOOR AND OUTDOOR USE
120V 60Hz 0.34A
UL FILE NO.: E329250
MODEL NO.: L12046-C
MADE IN CHINA

ASSEMBLY DIAGRAM

Part	Description	Quantity
A	Body	1
B	Head	1
C	Fore Legs	2
D	Hind Legs	2
E	Antlers	2
F	Eyes	2
G	Tail	1
H	Bowknot	1

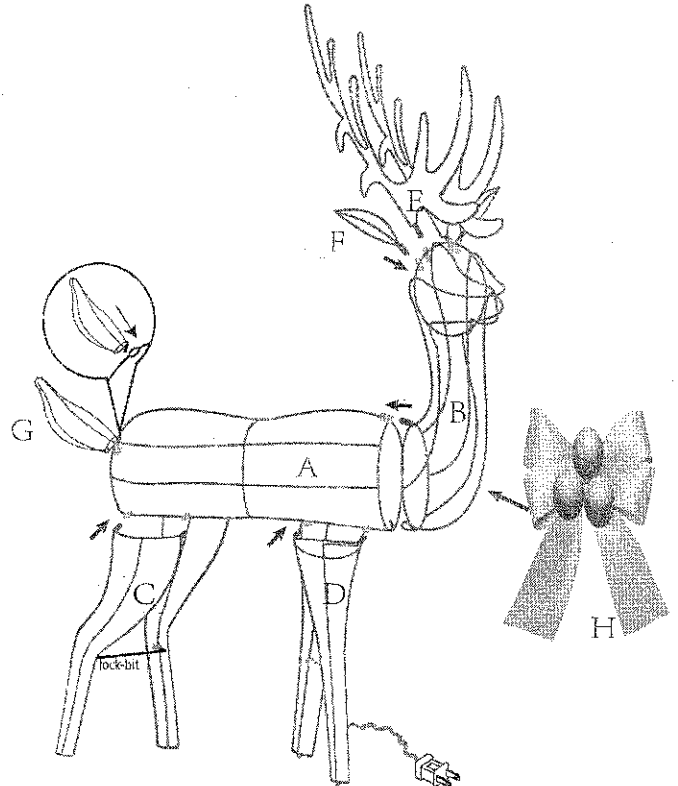

REPLACEMENT PARTS LIST

Description	Quantity
Spare bulb	4 pcs
Fuse	2 pcs
Plastic ties	10 pcs
Ground stakes	4 pcs

Assemble instructions:

- Take out all components, open up the body cover and take out the head. Then, assemble the head with the body (A & B).
- Insert the front legs and back legs into the body, Use the lock-bit device between two fore legs and back legs fixed the position. (C & D)
- Insert antler and eyes accordingly. (E & F)
- Insert bowknot and tail accordingly.(G & H)
- Use lawn stakes to secure on the ground.