

Thank you for purchasing this product. Please read the instructions and warnings carefully before use to ensure safe and satisfactory operation of this product.

SPECIFICATION:

VOLT	LAMPS NUMBER	LAMP SPEC	RATED POWER
120V~60HZ	100	3V,MAX,110mA	0.66W


CAUTIONS:

1. Do not operate the lights in the packaging - risk of fire!
2. This item is not a toy! It is only intended as decoration!
3. Keep children and pets at a safe distance from the Christmas silhouette.
4. We recommend that you only operate the lights via a residual current circuit breaker(FI switch) Seek advice from an electrical specialist.
5. Remove the plug from the mains socket to switch the lights off. Do not pull on the light chain itself.
6. Do not use any steel brackets or nails to attach the light chain. Do not suspend the light chain over sharp edges, hooks or nails.
7. Do not use the light chain if the PVC outer sheath of the cable or the mains adapter is damaged. If any damages are discovered you should discontinue using the rope light, and it should be scrapped.
8. Lights chain should never be connected electrically to other light chains, fairy lights or other such items.
9. Do not operate the lights in close proximity to gas or electric heaters, naked flames, candles or other heat sources.
10. Danger of overheating! Do not cover the light chain with cloth, paper or any other material. Do not use the light chain inside enclosed furniture, etc.
11. If you are using an extension lead outside, make sure that it is suitable for outdoor use.
12. Extension leads must be suitable for use with the specified power rating (see the packaging and type plate).
13. Before using the lights for the first time, check whether the rated voltage specified on the type plate corresponds to the mains voltage!
14. After installation, the mains cable and the plug must be free of any tractive and rotary forces.
15. Only plug in the light chain after it has been fully assembled.
16. Danger of electric shock!
17. Do not submerge the light chain in water. Keep the light chain at a distance of at least 5 metres from swimming pools or ponds. Protect the mains plug from moisture.
18. The lights can not be replaced!
19. This product contains recyclable materials. Do not dispose this product as unsorted municipal waste. Please contact your local municipality for the nearest collection point.
20. The power unit that comes with the product is intended to be correctly oriented in a vertical or floor-mount position. Mount the unit at a height greater than 3m (12") from the ground. Install only to a covered Class A GFCL receptacle that was a weatherproof enclosure with the attachment plug cap inserted or removed. Not for use with receptacles.
21. Do not leave the light on continuously more than 12hrs.

ASSEMBLY INSTRUCTIONS

- A. Carefully open the packaging.
- B. Make sure that the mains plug is not connected to the socket when assembling the light.
- C. Connect the light cable to transformer then plug the transformer into the mains.

36 Inch Red Ornament

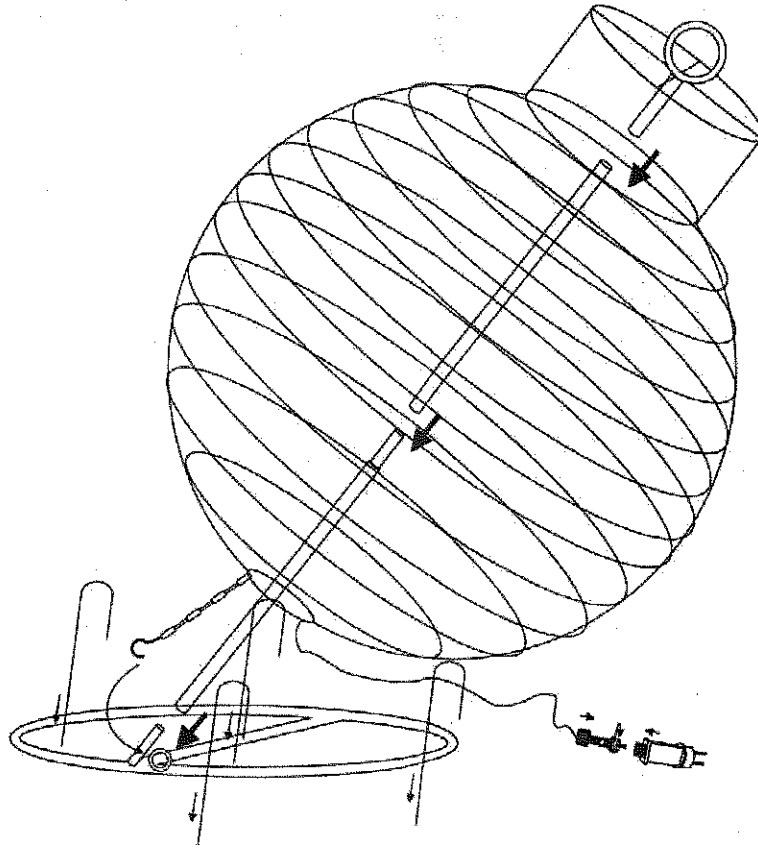

Package Contents/Parts List		
Part	Description	Quantity
A	Tube 1	1
B	Tube 2	1
C	Fabric Lantern	1
D	Base	1
E	Plastic Tie	10
F	Ground Stakes	4

1. Carefully remove item from the protective wrap to avoid damaging any of the light bulbs or parts.
2. Connect the lower pole and upper pole to each other by inserting the rod into the hole. Then firmly insert the assembled pole onto the rod on the base.
3. Hang the ornament on the upper pole by inserting the rod in the top center of the ornament into the top of the support pole. Then release the ornament gently downward onto the stand.
4. Secure the ornament to the base by attaching the hook on the bottom of the ornament to the ring on the base.
5. Secure the item firmly into the ground by pushing 4 lawn stakes through the base.
6. Insert the 2 - pin plug of the light set to the socket of the adapter, then turn the plug cap clockwise until it is secure. Then connect the adapter to a listed extension cord.