
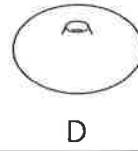


Upholstered Boyne Barstool


Part # BS-BOYNEUP XXXX

19-0423


PARTS

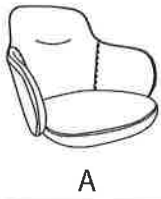


1

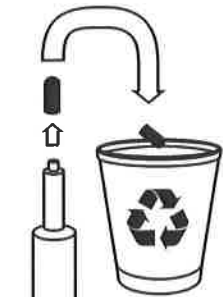


REMOVE
BLACK CAP
AND THROW
AWAY

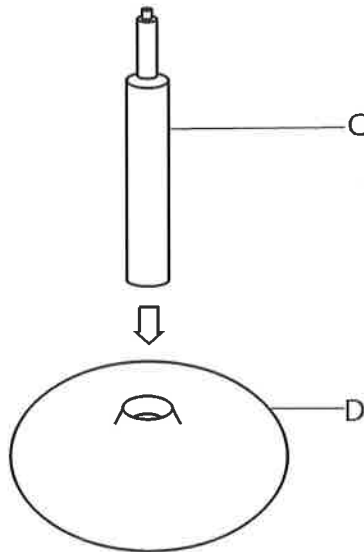

2

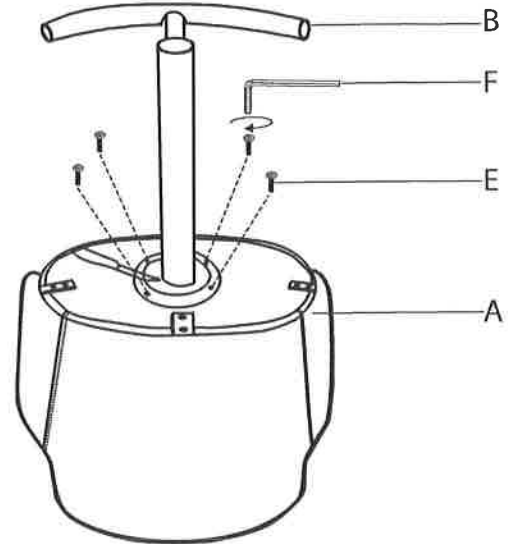

3

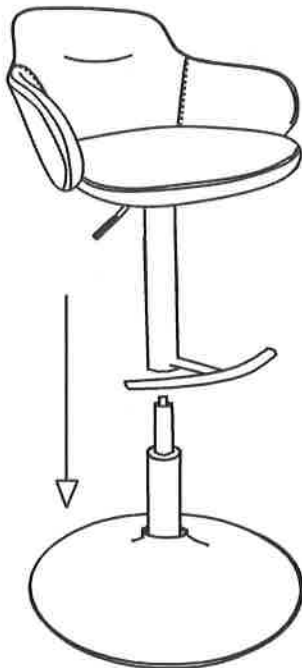

4



SIT TO SECURE



Do not over tighten.
 Do not use power tools to assemble.