



# Viva Bar Stool

Part # JMB-VIVA XX

14-0422

## VIVA INSTRUCTIONS

1. Unscrew 4 screws on bottom of seat.
2. When seat is upside down, place pole with hydraulic lever through both holes of the stool (lever end first). FIGURE A
3. Screw metal plate to bottom of pole using allen wrench. These should be the 4 screws in the bag. Note: Lever should be on right side of stool if you were to be sitting in it.
4. Use allen wrench to fasten metal plate and pole to the bottom of the seat. Secure the 4 screws. FIGURE A
5. Unscrew 4 small screws located on the bottom of seat that is now partially covered by metal plate from pole.
6. Attach pole to base with large bolt and washer (provided in hardware.). FIGURE B
7. Insert metal pole and base unit into bottom of chair and pole unit.

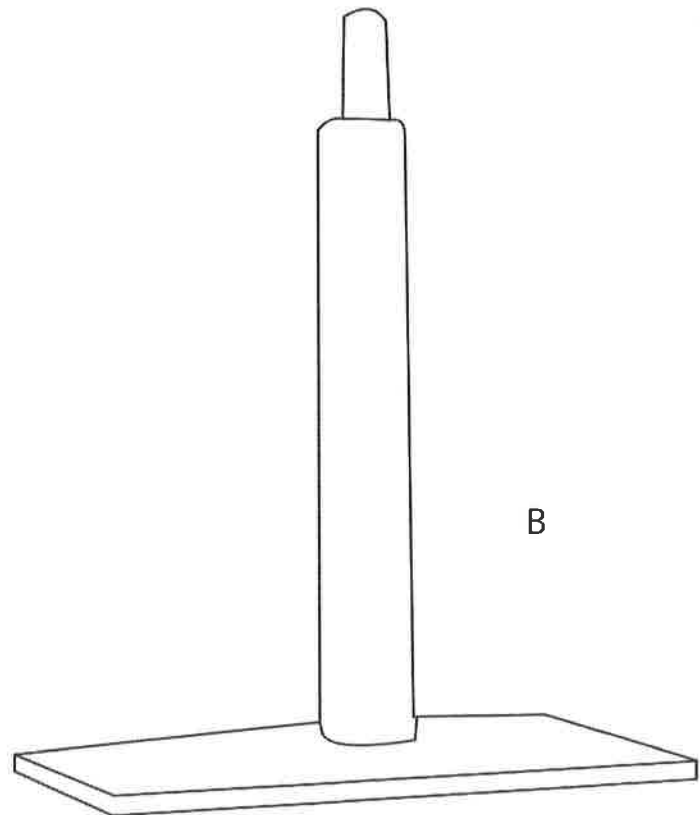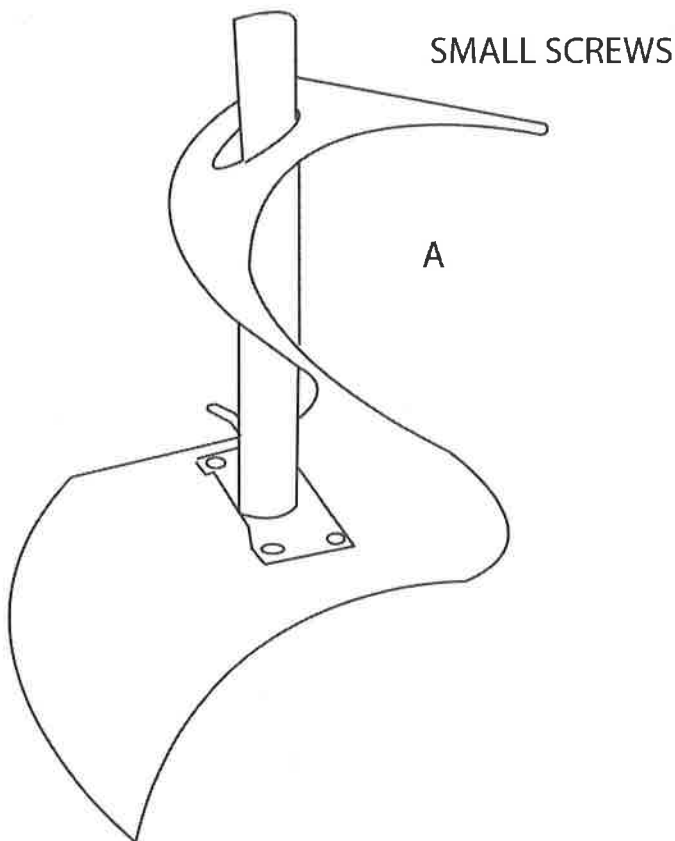

Do not over tighten.  
Do not use power tools to assemble.